



Owner's Manual

USER SHOULD READ THIS USER GUIDE CAREFULLY BEFORE USING

THIS IS NOT A GOLF CART.

It's The Ultimate Electric Golf Caddy



3 Year Warranty

22 lbs. including battery
No Switches



36 MONTH LIMITED WARRANTY

Your eMotion Caddy has been inspected and tested and is guaranteed for a period of twenty four months from the date of purchase against defects in workmanship and materials. During this warranty period, our sole obligation shall be to either repair or replace the defective products, at our option. All replaced products or parts shall become our property.

Normal wear and tear is expressly excluded.

IMPORTANT: PLEASE RETAIN A COPY OF WARRANTY CARD.

To obtain a replacement product under this warranty, you will need to produce satisfactory evidence of the date of purchase. Normally the completed warranty card and purchase receipt must be presented with the product. The warranty card should be filled out at the time of purchase – it is in your interest to make sure this is done.

When a product is replaced, that replacement will be the same model as the faulty product or accessory excluding packaging, instruction card etc. Where a replacement product is supplied will be covered under this warranty only for the balance of the original warranty period.

Any model that is no longer available will be replaced by a model of value and with such features as we consider appropriate in the circumstances.

Emotiongolfcaddy.com is not responsible for freight charges, loss or damage in transit.

If service is required after the warranty period has expired, the product should be returned to a recommended service agent. Service outside the warranty period will be at your cost.

If any of the provisions of the foregoing are contrary to any relevant legislation, then that provision shall be deemed to be excluded from the warranty and the rest of the provision(s) will continue to apply.

In no event shall we be liable for any damages, whether in contract or tort (including negligence) including but not limited to direct, consequential, special, exemplary, incidental and indirect damages arising out of, or in connection with, the use of (or inability to use) the product

Please fill out the Warranty Card before using the Emotion Caddy and send to www.eMotiongolfcaddy.com



TROUBLESHOOTING

THE eMOTION CADDY DOES NOT TURN ON?

1. THE BATTERY IS NOT INSERTED PROPERLY
2. THE BATTERY CONTACTS ARE BENT AND NEED TO BE REPAIRED

THE EMOTION CADDY DOES NOT OPERATE?

1. CHECK THE LIGHTS FOR CODES A FAST BLINKING **RED** LIGHT MEANS THE BATTERY IS FULLY DISCHARGED AND NEEDS TO BE RECHARGED, FURTHER USAGE WILL PERMANENTLY DAMAGE THE BATTERY. IN THIS CASE THE CADDY MUST BE TURNED OFF BY PRESSING THE **e** LOGO BUTTON. IT IS POSSIBLE TO USE THE CADDY AS A MANUAL CADDY WITHOUT DAMAGE.
2. A CONSTANT **RED** LIGHT MEANS THE CADDY IS IN NEED OF SERVICE, PLEASE CALL eMotiongolfcaddy. (Toll Free : 855-816-7501)
3. **RED** AND **GREEN** ALTERNATING LIGHTS MEAN THE CADDY IS LOCKED AND NEEDS TO BE UN-LOCKED WITH THE SECURITY KEY (IT IS NOT NECESSARY TO LEAVE THE SECURITY KEY IN THE CADDY ONCE IT IS UNLOCKED)
4. MAKE SURE THE BATTERY IS INSERTED PROPERLY AND FULLY CHARGED

~~LOST MY SECURITY KEY?~~

- ~~1. PLEASE CONTACT eMotiongolfcaddy DIRECTLY, PLEASE BE READY WITH YOUR SERIAL NUMBER AND PERSONAL INFORMATION TO VERIFY OWNERSHIP. (IT IS IMPORTANT TO RETURN THE WARRANTY CARD TO INSURE PROPER IDENTIFICATION)~~

IMPORTANT SAFEGUARDS



Congratulations on your purchase of the eMotion Caddy. It is the lightest, easiest to use, most technologically advanced caddy on the market. To insure that you are using the eMotion Caddy properly, please take a few minutes to review this Owner's Manual.

Before you get started please take a few minutes to fill out the WARRANTY CARD.

Each eMotion Caddy has a unique serial number. By registering this number to you, we will be able to provide you with the quickest service should there be any problems in the future.

To get started, take the Emotion Caddy out of its shipping box,

This box will contain the following parts:

1. Frame / Handle with 2 wheels attached
2. Battery
3. Battery Charger
- ~~4. Security Key~~
5. Carrying Case
6. Score Card Holder
7. Umbrella Holder (option – see page “using the eMotion Caddy”)
8. Drink Holder (option – see page “using the eMotion Caddy”)

❖All option products can be purchase from www.eMotiongolfcaddy.com❖



CHARGE THE BATTERY

The eMotion Caddy has the most advanced battery on the market. It is a Lithium Manganese technology that has no memory effect and can be recharged over **1,000** times for many years of usages.

❖The battery should be fully charged before using❖

1. Simply plug the cable from the battery charger into the battery. (Fig. 1)

<CAUTION> : THE PLUG IS DESIGNED TO FIT INTO THE BATTERY ONE WAY, MISUSE MAY DAMAGE THE CHARGER PLUG OR BATTERY PLUG.



Fig. 1

2. There is a small light on the charger that will light up **Red** when battery is being charged and will turn to **Green** when the battery is fully charged. (6 to 8 hours to fully charge)

The battery can also be charged while the battery is in the eMotion Caddy by simply plugging the charger directly into the plug in the handle of the eMotion Caddy. (Fig. 2)



Fig. 2

<CAUTION> : ALTHOUGH THE BATTERY CHARGER IS AUTOMATIC, TO BE SAFE, DO NOT LEAVE THE CHARGER PLUGGED INTO THE BATTERY FOR MORE THAN 8 HOURS. THE BATTERY MUST BE STORED ABOVE 32°F TO AVOID PERMANENT DAMAGE.



STORING THE eMOTION CADDY

To store the caddy when you are finished with the round simply follow the assembly procedure in reverse.

1. Loosen the [handle/bag holder] lever and lower the handle down into the storage position.
2. Loosen the straps and remove the bag.
3. Loosen the [handle/bag holder] lever, fold down the upper bag holder and retighten the lever.
4. Remove the battery by pressing the grey button on the base of the caddy (Fig. 15)

It is not necessary to remove the battery for storage. When the caddy is off. It does not draw any charge and will not drain the battery.



Fig. 15

5. Fold the bottom of the caddy completely – The caddy can be stored with the [wheel/motors] attached to the frame

❖Removing the [Wheel/Motors]❖

1. Turn the caddy on its side (Fig. 16)
2. Place your foot on the wheel and pull up gently until a slight click is felt (Fig. 17)
3. Release the [wheel/motor] from the frame by pulling the release lever on the bottom of the frame (Fig. 18). Remove the wheel (Fig. 19)
4. Repeat the process with the other [wheel/motor]. (Fig. 20)



Fig. 16



Fig. 17



Fig. 18



Fig. 19



Fig. 20

In order to maximize the life of the eMotion Caddy, store in a dry moderate temperature Place. Store the battery above 32°F to avoid damage.



GENERAL USE

The eMotion Caddy can be used in all conditions including rain and on all parts of the course.

<CAUTION> : 1. DO NOT USE THE CADDY ON THE GREEN
2. DO NOT USE THE CADDY IN MORE THAN 2 INCHES OF WATER OR SUBMERGE THE CADDY UNDER WATER
3. THE CADDY IS NOT MADE TO GO UP AND DOWN STAIRS, BANGING THE CADDY UP AND DOWN STAIRS WITH A HEAVY BAG COULD CAUSE DAMAGE TO THE [MOTOR/WHEEL] ASSEMBLY.

There are two lights on the handle that can turn on during use. In most cases the cart will be operating normally and the **GREEN** light will be on at times during the round (the e2 caddy will go into standby mode when left standing and the **GREEN** light will go out).

If during the round, the **RED** light comes on and stays on, the caddy needs service. In this case, the caddy should be turned off by pressing the **e** logo button. – PLEASE CALL EMOTIONGOLFCADDY AS SOON AS POSSIBLE

If during the round, the **RED** lights blinks, the battery is low or discharged and needs to be re-charged.

The caddy should be turned off immediately by pressing the **e** logo button. Then re-charge the battery completely.

<CAUTION> : IN CASE OF A FLASHING **RED** LIGHT, THE CADDY MUST BE TURNED OFF TO PREVENT POTENTIAL DAMAGE TO THE BATTERY.

If it becomes necessary to turn off the caddy during the round, it can be used as a manual caddy during the remainder of the round without any damage to the caddy. In normal conditions, once you are finished with the round simply push the **e** logo button to turn the caddy off.

e 3 caddy – when the on/off button is pressed the **GREEN** light flashes for 3 seconds, if during this 3 seconds, the button is pressed again the caddy will move forward for 50 feet. If the button is not pressed, the caddy will turn off.

If you are testing the eMotion Caddy indoors on a carpeted surface, there can be a static electricity charge buildup that will give a normal shock, this will not hurt eMotion Caddy.

The eMotion Caddy has powerful electric motors and is not a toy, please keep the caddy secure from children to prevent potential accidents.



eMOTION CADDY SETUP

Once the battery is fully charged, the eMotion Caddy is ready to use. To begin using the caddy some assembly and setup is necessary.

(The eMotion Caddy is shipped fully assembled with the [wheel/motors] attached.)

1. Stand the frame upright and unfold the lower [frame/bag holder]. (Fig. 4)
>>> For the **e3** model, make sure the 3rd wheel is unfolded in the proper position (Fig. 5)



Fig. 4



Fig. 5



Fig. 6



Fig. 7

2. Insert the battery in caddy. The battery inserts into the opening at the base of the caddy (Fig. 6). Press the battery into the base until it clicks into place.

<CAUTION> : THE BATTERY CAN ONLY FIT PROPERLY ONE WAY INTO THE BASE. ATTEMPTING TO FORCE IT INTO THE BASE MAY DAMAGE THE CADDY OR THE BATTERY (Fig. 7)

<CAUTION> : Wrap battery compartment with Velcro strap for secured battery.

3. Loosen the [handle/upper Bag Holder] lever (approx. 4 turns) and raise the upper bag holder 90 degrees, then lightly tighten the lever (approx. 2 turns). (Fig. 8)

4. Set your golf bag onto the bottom platform. (Fig. 9)

5. Then center the bag in the upper bag holder. (Fig. 10)

6. Attach and tightly secure the lower and upper bag straps.(Fig. 11)

e 2 caddy – the handle must be set to slightly below waist height.
e 3 caddy – the handle should be set at a comfortable height to make pushing or pulling the caddy easy.



Fig. 8



Fig. 9



Fig. 10



Fig. 11



USING THE eMOTION CADDY

To begin using the eMotion Caddy simply press the **e** logo on the handle and the **GREEN** light will light up and the caddy is ready to use. (Fig. 12)

THAT'S IT!

This is only when the caddy is unlocked, each caddy is shipped from the factory unlocked. On the **e2** caddy, the light will blink **GREEN** when the caddy is in standby mode waiting for your next shot.



Fig. 12

SECURITY KEY

Each eMotion Caddy comes with a Security Key (Fig. 13) to prevent usage by unauthorized people. The Security Key is similar to a car door key, each one is unique and cannot be used in another caddy.



Fig. 13

To lock the eMotion caddy, simply plug the security key into the plug in the underside of the handle (Fig. 13) and remove it, the light will alternate **RED** and **GREEN**, this means the caddy is in the lock condition.

To unlock the caddy, simply push the **e** button on the handle and the lights will flash **GREEN** and **RED**, then plug the security key in the plug on the underside of the handle (Fig. 13), the **GREEN** light will stay on and the caddy is unlocked.

<CAUTION> : IT IS NOT NECESSARY TO LEAVE THE SECURITY KEY PLUGGED IN AND IT COULD BE LOST IF IT IS LEFT IN.

e 3 CADDY

For the e3 model, there are 2 features that are not on the e2 model.

❖ e3 Features eMotion Caddy's Patented Pace Technology ❖

>>> Simply place your hand on the handle, it is not necessary to grip the handle.

>>> The eMotion Caddy has a very sophisticated sensor in the grip and will move forward at your pace.

>>> After a few steps, the e3 caddy will perfectly match your speed and you can release the handle. (Fig. 14)

>>> The caddy will maintain this pace until you touch the handle to speed it up or slow it down or stop it.



Fig. 14

<CAUTION> : YOU MUST KEEP TRACK OF THE CADDY WHEN IT IS IN THE MODE BECAUSE IT CAN MOVE ON ITS OWN AND POTENTIALLY CRASH.

>>> Another feature for the e3 model is the automatic forward setting.

By pressing the **e** logo button 2 times quickly, the caddy will move forward for 50 feet.

>>> This setting can be used to send the caddy ahead to the next tee or away from the green.


<CAUTION> : MAKE SURE THE DIRECTION THAT YOU ARE SENDING THE CADDY IS CLEAR. THE CADDY WILL BE MOVING ON ITS OWN AND CAN POTENTIALLY CRASH.

OPTIONS

1. Umbrella Holder : This golf cart umbrella holder clamps to the cart to hold an umbrella, It fits most golf carts and its holder's clamps easily attach to the cart frame tube and require two screws to be tightened. (Opt. 1)
2. Cub Holder : Fully adjustable. Just twist the bottom and it increases in length and automatically adjusts its inner diameter. (Opt. 2)



Opt. 1

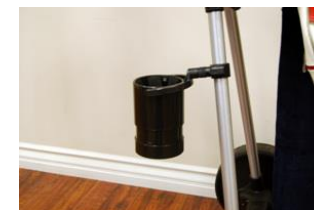

Opt. 2