

6.0 Front Wheel

Unlocking & Locking the Front Wheel

The front swivel wheel can be set in two positions.

1) Unlocked position to allow for 360deg swivel for optimum turning ability. Move the knob, on top of the front wheel assembly, to the left hand side.




2) Locked position is best when using the Controlled Distance function. Move the knob, on top of the front wheel assembly, to the right hand side.



7.0 Operating the Digital Top Box

7.1 Top Box Display

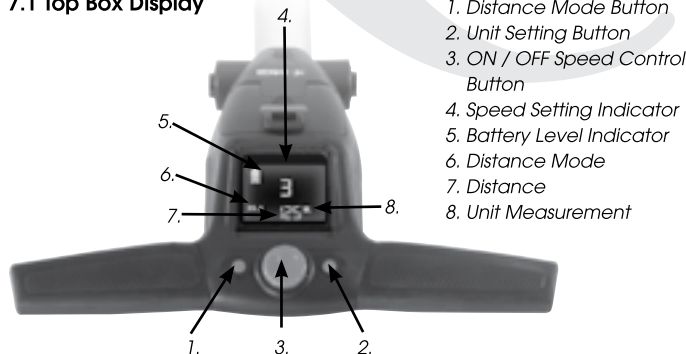

7.2 Start / Stop the Buggy



ZIP Buggy Speed Control

Please note the following points regarding the ZIP Buggy Speed Control.

1. To select the desired speed, rotate the speed control button. Turning the speed control button clockwise will increase the speed, whilst anti-clockwise will decrease speed.
2. The speed setting chosen is displayed in the centre of the coloured screen.

Please note you will feel notches as you rotate the speed control. The notches do not indicate a change in speed. The speed will only increase or decrease as the number changes in the display.

3. To start the buggy at this desired speed, tap the top of the speed control button.
4. Another tap will stop the buggy.
5. The desired speed can be altered up or down while the buggy is moving.

7.3 Turn the Buggy Off

ZIP Buggy Battery

Please note the following points regarding the Zip Buggy Battery.

Connecting the Battery onto the Buggy

1. Position the battery on the buggy and push the battery down to secure it. Push the battery handle down to connect the battery to the buggy.
2. To turn the buggy Top Box Display off: Hold down the Start/Stop Speed Control Button and Left Hand Distance Mode Button for four seconds and the display will turn off thereby disabling the Top Box.

Please note that the battery will still be connected to the buggy and will continue to drain whilst connected.

3. Please note that the buggy display will also turn off if the Speed Control is not operated for 30 minutes.

Once again, please note that the battery will still be connected to the buggy and will continue to drain whilst connected.

4. To reactivate the Top Box Display, whilst the battery is connected, hold down the Start/Stop Speed Control Button and Left Hand Distance Mode Button for four seconds and the display will turn on thereby enabling the Top Box.
5. To fully shut down the buggy and prevent the battery from discharging, disconnect the battery by lifting its handle. The battery can be left on or removed from the buggy.