

User manual for electric models



Upright Caddy Company LLC.
1-866-892-2339
www.uprightcaddy.com
E-mail misterd39@hotmail.com



1304-EM

Switch the power on and slowly turn the speed control switch clockwise, the speed of the cart will increase as you turn the switch. You may wish to fix the speed of the cart by using the speed control to set your desired speed and use the power switch to turn off and then on to resume set speed.



Except for the quick release wheels your cart comes completely assembled. Simply pull up handle to lock cart into position and use pull up handle to release and fold down the cart.

Fit the rear wheels by pulling up the quick release handle on the axle and pushing the wheel onto the axle until it fits over the clutch. The wheel must fit over the clutch. Fit the front wheels by pushing onto the axle while pulling up quick release catch. You may release all wheels by releasing the quick release button the the wheels.

The battery cable is fitted to connect to either the trolley or to the battery charger. Place the battery in the front battery tray prior to connecting the battery to the trolley. The battery connector has a T shaped terminal to prevent incorrect connections and avoid reverse polarity.

Battery Life and Maintenance

A battery will hold its charge for several months if it is not used. Batteries are free from 'memory effect' and therefore it is not necessary to discharge the battery before recharging.

A battery will normally last for 250 or more charges before requiring replacement if you need to store the battery for any period it is important to ensure it is charged first. Do not store a flat battery or it will become unusable.

1. When you get your new battery, put it on the charge for 12 hours to "activate" it.
2. For the first 3 outings you may find that your cart is a little tired at the end of the round, this is normal and will be fine once the battery has reached full power, normally after three rounds.
3. Always keep your battery on charge between games.
4. Never leave your battery connected to the charger with the mains switch off, or during prolonged power failures, your battery may be irretrievably discharged.
5. Never play more than 18 holes without fully recharging- you will discharge the battery below its designed minimum voltage and damage it.
6. Your electric cart will operate within a range of about 55 yds depending on atmospheric conditions.

1305-ER



Press this key once and the cart will start to move forward. Keep pressing the key will take the cart to a maximum speed.

Press this key to move the cart in reverse

Press this key to stop the cart.

A gentle push of this key will turn the cart in a right position and then continue in the new direction.

Same procedure only turn left.

Press this key to pause and restart the cart

