

## REMOTE CONTROL LAYOUT (continued)

- **To Sync the remote: if the cart does not respond using the remote:**
  1. Check to make sure the battery is connected properly & that the green power light is on. Also make sure the remote is switched on and the blue LED indicator light is blinking when buttons are pressed.
  2. If step 1 does not work. Then turn off the cart & remote control power.
  3. Press and hold the cart power button for 10 seconds, until the green power light is blinking. Then turn on the remote control power.
  4. Next, press any button on the remote. The cart should respond from the remote input.
  5. After the cart and remote have synced and the cart is now responsive from remote input.
  6. The cart should now automatically sync with the remote whenever the remote and cart are powered on.
  7. If the cart becomes unresponsive again from remote input, repeat the process of syncing the remote and cart.
  
- **The cart has three speeds in each direction:**
  1. **UP** - Forward (3 speeds by pressing: once, twice, 3 times)
  2. **DOWN** - Backwards (3 speeds by pressing: once, twice, 3 times)
  3. **Arrow L** - Left Turn (single clicks or holding)
  4. **Arrow R** - Right Turn (single clicks or holding)
  5. **'Circle' (middle button)** - Stop
  6. **Play/Pause:** this button runs the cart in the forward direction for set periods of time
    - One Press: the cart runs for  $\approx 11$  seconds ( $\approx 10$  yards)
    - Two presses: the cart runs for  $\approx 18$  seconds ( $\approx 20$  yards)
    - Three presses: the cart runs for  $\approx 25$  seconds ( $\approx 30$  yards)
    - Note: you can stop the cart by pressing the "circle" button at any time as well as steer the cart using the arrow buttons.

## SPEED CONTROL KNOB

- The silver knob located by the power button & timer button is the Speed control adjustment.
- This knob controls how fast the cart runs **without** the remote.
- The remote can only be used to stop the cart: pressing the middle “circle” button once.
- This knob is used for walking behind the cart without using the remote. The cart will **only** move forward when using the speed control knob.
- To increase speed, turn the knob clockwise; to decrease speed, turn the knob counterclockwise. To stop the cart, turn the knob counter clockwise until the knob does not rotate any further. Also, pressing the power button once on the cart handle will stop the cart.

**Do not touch the knob if you are not ready for the cart to move. The Cart will continue to move until the knob is turned to the off position. Also, pressing the power button once or pressing the middle button on the remote will stop the cart.**

## REMOTE CONTROL LAYOUT



- Press the 'GO/STOP' to turn on the remote control. Press the GO/STOP key to turn off the remote control after every use. The remote will also shut off automatically within 5 minutes.
- The remote control use ordinary AAA battery.