

Seat Installation X4/X8 Series



Seat should be on the right side of cart


(NOTE: Left/Right is determined standing behind the cart)

Step 1: Seat bracket is attached to the two bars of the lower frame using the two clamps provided.

The clamp with two screws on the right and the clamp with one screw on the left.


(Note: the one screw clamp has to be spread open to fit over the bar. If necessary apply heat with heat gun/ hair dryer to the clamp to allow easier assembly to bar.)

Seat bracket must be attached curve "UP"

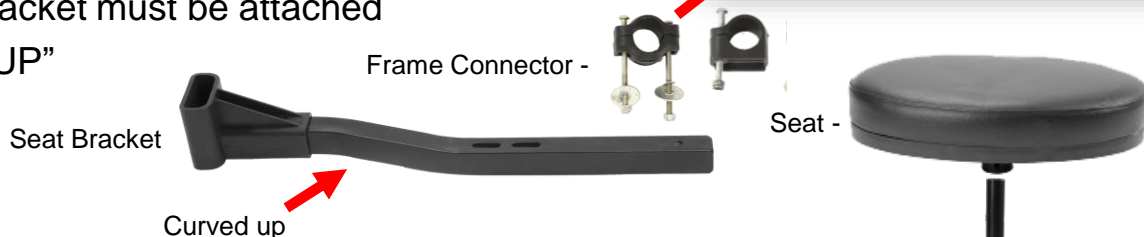

Step 2: Attach seat to top of seat post (tight fit)

Step 3: Fit bottom of seat into slot on the bracket (tight fit)

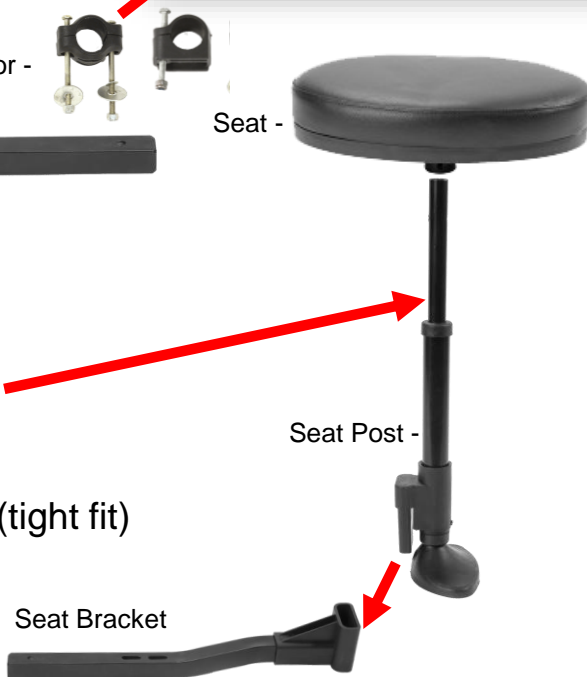

Step 4: Stand should rest several inches off the ground when complete. Test by hand to make sure base of assembly sets firmly on the ground when weight is applied.